


R.A.D. SYSTEMS

Recoil Absorption Devices Operation & Maintenance **Instructions for the R.A.D. System #2a**

Pad Adjustment

**Adjustment
Lock/Unlock**

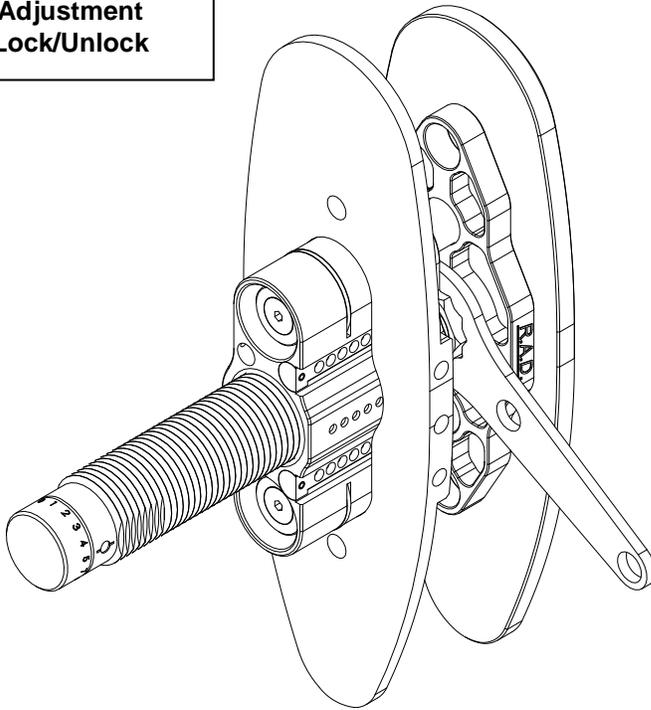

To unlock the pad adjustment use the 5/8 wrench supplied with the unit to loose the Adjuster Screw. Position the pad to the desired location and retighten.


To adjust the length of pull adjustment and the resistances of the hydraulic shock absorber follow these steps.

1. Use a 3/32" Allen Wrench to remove the two 10-24 x 1/4 locking setscrews.
2. Next loosen the 10-24 x 3/8 setscrews 3 turns. This will allow you to adjust the length of pull setting and remove the reducer from the stock.
3. With the reducer out of the stock you now have access to the adjustment knob.
4. Rotate the knob to the desired setting and reinstall.

The settings on the adjustment range from 1 to 8 with 8 being the heaviest and 1 the lightest.

*Note: To light of setting, for a load will result in an undesirable effect.


Shock Adjustment

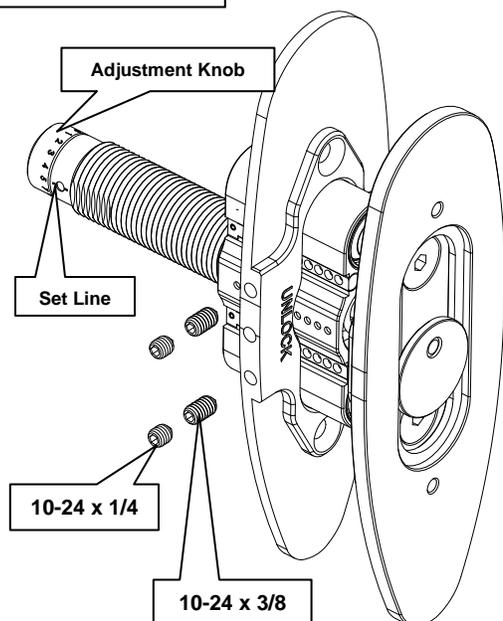

Recoil Absorption Devices Operation & Maintenance Instructions

Maintenance

With some simple care **R.A.D Systems** will last for a lifetime of shooting pleasure. To insure this it is recommended that once yearly or every 5000 rounds that the system is disassembled and lubricated. The following steps outline the steps to disassemble the unit.

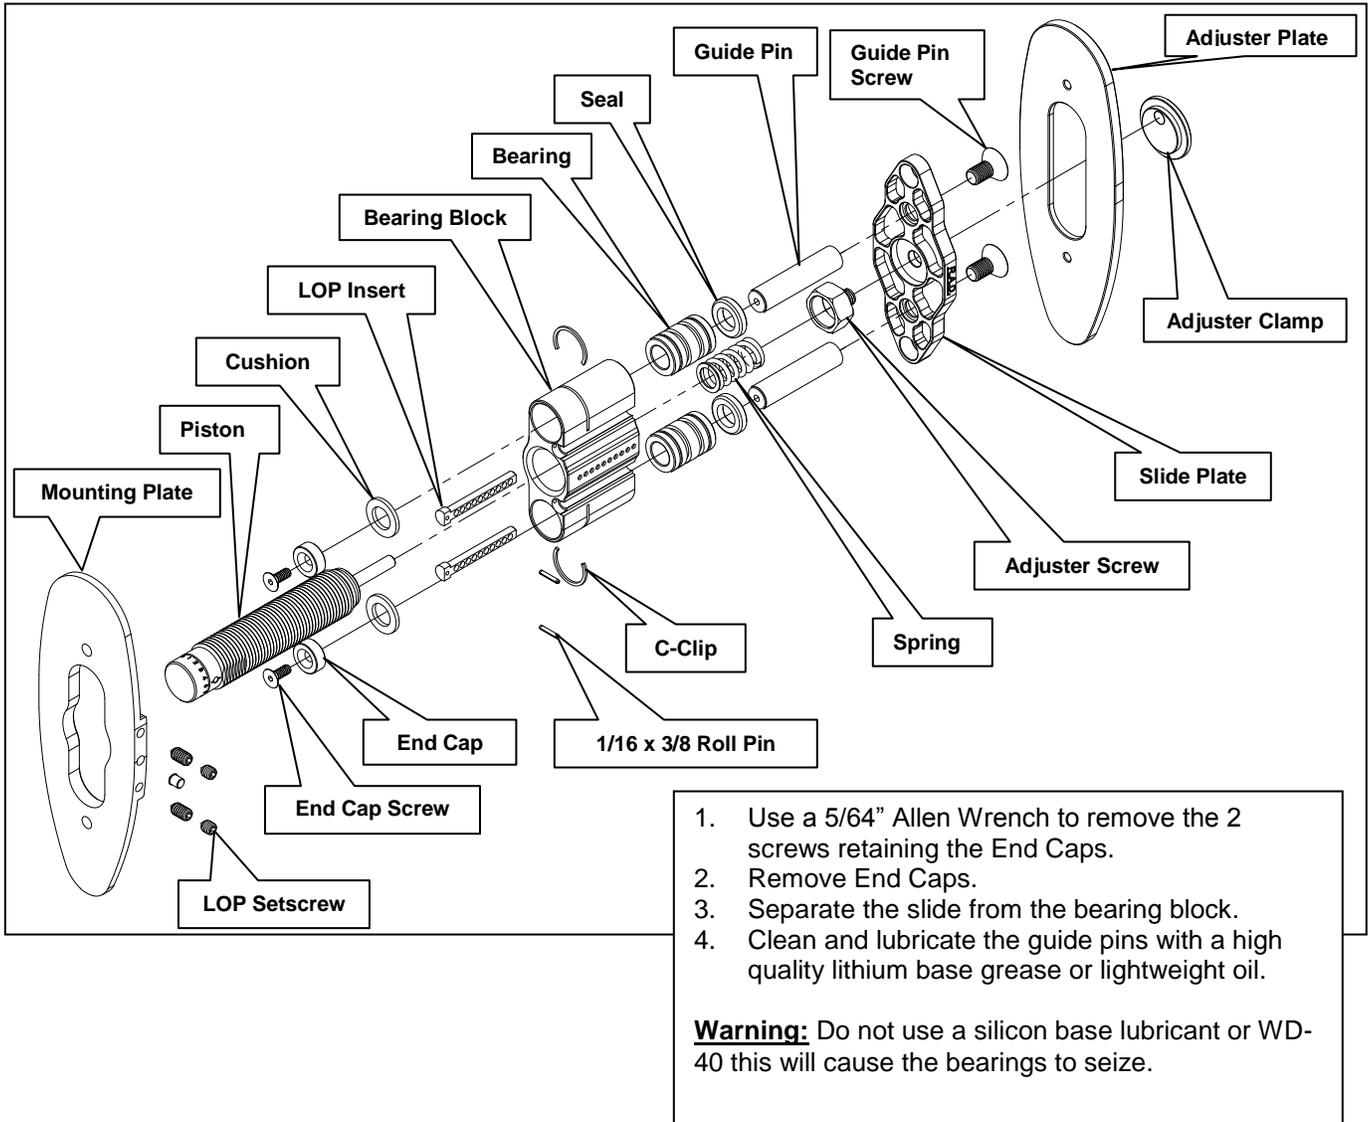

R.A.D Systems are designed and tested to provide shooters with years of trouble free enjoyment. Each system is guaranteed free from defect or failure for 3 years from date of manufacture.

For Service Contact:
Hart Systems, L.L.C.

Rt. 1 Box 214B, Queen City, MO 63561
(660) 341-4829